

<b>Part Number</b>	<b>Description</b>
204-001-012-029	Tube Assembly
204-001-012-1	Tube Assy
204-001-014-007	Tail Rotor Pedals
204-001-014-007	Tube Assembly
204-001-014-007	Tube Assembly
204-001-014-007	Tube Assembly
204-001-027-023	Tube Assembly Collective Pitch
204-001-042-1	Cylinder Assembly
204-001-357-1	Cyclic Controls
204-001-359-001	Jackshaft
204-001-362-1	Cyclic Controls
204-001-376-003	Magnetic Brake / Actuator Relay
204-001-700-11	Rudder Pedal Assembly
204-001-701	TR Control Adj.
204-001-809-1	Tail Rotor Adjustment
204-031-920-003	Pylon Damper
204-031-920-003	Pylon Damper
204-040-620-009	Tail Rotor Shaft
204-040-620-11	T/R Drive shaft
204-040-760-3	Oil Filter Housing
204-040-785-003	Spider Assembly
204-060-762-103	Linear Actuator
204-070-483-003	Air Vent Valve
204-070-540-3	Air Noise Suppressor
204-076-036-5	Rotor Brake Handle
205-030-236-5	#1 T/R Hanger Bearing Support
205-030-919-101	Isolation Mount / Transmission
205-030-919-101	Isolation Mount / Transmission
205-030-919-101	Isolation Mount / Transmission
205-030-919-101	Isolation Mount / Transmission
205-030-953-250	Transmission Island Panel
205-032-669-126	Door Track R/H
205-072-277-009	Mixing Valve
205-072-407-101	Duct Assembly
205-072-704-103	2 Place Seat
205-072-704-103	2 Place Seat
209-060-221-001	Starter Generator - #2
209-060-221-001	Starter Generator - #1
209-062-501-002	Oil Cooler
209-062-501-005	Oil Cooler
209-062-502-101	Engine Oil Cooling Fan
209-062-502-101	Engine Oil Cooling Fan
209-062-520-1	Check Valve
209-062-908-105	Fire Bottle Left
209-070-262-101	Oil Temp & Pressure Gauge
209-070-262-101	Temp & Pressure Indicator

209-070-263-3	Dual Indicator
209-070-263-3	Dual Indicator
209-070-264-3	Dual Ammeter
212-001-034-101	Servo Actuator
212-001-035-101	Servo Actuator
212-001-053-101	Tube Assembly
212-001-062-001	Tube Assembly
212-001-063-1	Tube Assembly
212-001-063-7	Tube Assembly
212-001-116-1	Control Arm Assembly
212-001-124-1	Copilot Collective Rotary Actuator
212-001-148-1	Copilot Throttle / Collective
212-001-162-017	Elbow & Support
212-001-188-7	Bell Crank
212-001-280-101	Servo Tubes
212-001-280-105	Servo Tubes
212-001-280-107	Servo Tubes
212-001-287-xxx	Pilot Throttle / Collective
212-001-313-101	Bracket Assembly
212-001-320-101	Fore / Aft Cyclic Series Activator
212-001-710-1	Tail Rotor Servo
212-001-747-1	Mixing Valve Crank
212-010-711-003	Link
212-010-711-003	Link
212-010-750-113	Tail Rotor Blade
212-010-750-113	Tail Rotor Blade
212-011-702-001	Tail Rotor Yoke
212-030-100-133	Tailboom
212-030-104-101	Lift Link
212-030-163-343	Panel
212-030-164-337	Door Assembly
212-030-170	Structural Tube
212-030-282-123	Access Cover
212-030-348-103	Upper Nose Door
212-031-201-011	L/H Ejector
212-040-003-023	Intermediate Gearbox
212-040-004-009	Tail Rotor Gearbox
212-040-005-103	Main Drive Shaft
212-040-237-3	Valve Body / Oil Cooler
212-040-365-025	T/R Quill Assembly
212-040-600-005	Tail Rotor Driveshaft Bearing Hanger - #1
212-040-600-005	Tail Rotor Driveshaft Bearing Hanger - #3
212-040-600-005	T/R Hanger Bearing Assembly
212-040-600-005	Tail Rotor Driveshaft Bearing Hanger - #4
212-040-600-005	Tail Rotor Driveshaft Bearing Hanger - #2
212-060-715-001	Pivot Joint (Dual)
212-060-724-015	Tube Assembly

212-060-724-021	Tube Assembly
212-060-724-101	Tube Assembly
212-060-728-101	Jackshaft
212-060-740-1	Pivot Joint (Dual)
212-060-803-143	Upper Engine Cowl L/H
212-060-803-145	Upper Engine Cowl R/H
212-061-201-012	R/H Ejector
212-061-207-249	Skin Assembly L/H
212-061-501-1	Drain Valve
212-061-812-007	Pillar Assembly
212-061-812-008	Pillar Assembly
212-061-814-139	Oil Cooler Scoop Assembly
212-070-116-005	Oil Temp & Pressure Gauge
212-072-811-8	Interior A/C Ductwork
212-073-413-101	Duct
212-073-920-107	Cylinder
212-074-101-101	Transducer
212-075-036-101	GBX Oil Temp / PSI Ind
212-075-037-113	Tach
212-075-067-105	Internal Turbine Temp Indicator
212-075-067-109	ITT Indicator
212-075-139-1	Landing Light
212-075-199-001	Pivot Joint (Dual)
212-075-199-001	Starter Generator Relay
212-075-962-001	Light Dimmer Power Supply
212-075-962-1	Power Supply
212-076-003-109	Servo
212-076-003-109	Servo
212-076-003-119	Servo
212-076-004-101	Hydraulic Servo Actuator
212-076-005-111	Cyclic Servo - Left
212-076-005-111	Servo
212-076-005-111	Cyclic Servo - Right
212-076-005-111	Collective Servo
212-076-006-105	Hydraulic filter & Valve Assembly
212-076-007-008	Accumulator Assembly
212-076-007-008	Accumulator Assembly
212-076-011-101	Hydraulic Pump
212-077-163-001	Compass Control Panel
212-077-200-103	Control Communicator
212-321-103-W/S	Crosstube, Fwd High (STC)
124-043	Oil Temp & Pressure Gauge
124-043	Oil Temp & Pressure Gauge
124-044	Fuel Pressure
124-044	Fuel Pressure
064-1023-00	KTR 908
066-1069-01	DME Indicator

066-3012-01	KA 35A Marker Light
066-3012-01	KA 35A Marker Light
214-075-186-1	Temp Control Unit
214-075-186-1	Temp Control Unit
214-075-244-001	Rate Transmitter
214-075-244-001	Rate Transmitter