

Part_No	Description
50579	HYD. PRESS. XDCR
2594484	COMPASS FLUX VALVE
3019906	VALVE
3039009	BLEED VALVE
3043023	BLEED VALVE
063-1007-00	HF REC KTR993
066-1047-00	ADF RECEIVER
066-4004-00	VOR/LOC CONVERTER KN77
071-1274-01	HF CONTROL DISPLAY KFS-594
10-381550-4	IGNITION EXCITER UNIT
10-381550-4C	IGNITION EXCITER UNIT
124T1345	ITT IND
1372-1-5	DETECTOR RPM
1783755-645	RMI WHITE
1A250-1D	INVERTER 212
1C64-1	FUEL PUMP
201-0001	CONVERTER
204-001-376-003	BRAKE ASSY
204-001-603-001	LEVER ASSY
204-001-957-001	TUBE ASSY
204-010-937-009	DAMPER ASSY
204-031-244-005	BOLT ASSY
205-030-856-093	ELEVATOR ASSY
205-030-856-111	ELEVATOR ASSY
209-062-002-001	INDICATOR
209-070-262-009	INDICATOR
209-070-263-003	INDICATOR (VOLTMETER)
209-070-264-001	INDICATOR
209-070-264-003	DUAL AMP INDICATOR
209-075-325-011	IND MASTER CAUTION
209-075-326-005	DETECTOR RPM
212-001-902-001	BELLCRANK ASSY
212-030-206-001	PANEL ASSY
212-030-378-003	PANEL ASSY
212-030-378-004	FLOAT MOUNT
212-030-378-007	PANEL ASSY
212-060-204-001	DUCT ASSY
212-060-802-098	FAIRING ASSY
212-060-803-165	COWL ASSY
212-060-803-173	COWL ASSY
212-060-804-010	COWL DOOR
212-060-818-005	COWL ASSY
212-061-811-009	SHROUD ASSY
212-061-814-002	SCOOP ASSY OIL COOLER R
212-070-122-009	AIR SPEED IND

Part_No	Description
212-070-444-003	VALVE
212-075-067-109	INDICATOR ITT
212-075-406-003	FUEL SYSTEM PANEL
212-075-418-003	ACTUATOR STEP
212-075-418-105	ACTUATOR STEP
212-075-418-107	ACTUATOR
212-075-562-003	INDICATOR
212-076-011-101	PUMP HYD
212-077-163-001	CONTROL PANEL
2260-1001-1	DETECTOR RPM
2593379-001	REMOTE COMPENSATOR
270-2436-060	CONTROL UNIT
2C27-3	B.PUMP CART.
3030083A	COMPENSATION TRIM
3039009CL4	BLEED VALVE
3045478-01	COMPENSATION TRIM
3049038-03	BLEED VALVE
3244736-8	MANUAL FUEL CONTROL
381065-009	FUEL PROBE
384178-091	FUEL QTY SELECTOR SWITCH
391046-200	PROBE
393008-040	FUEL QTY IND
393008-046	FUEL QTY IND
4000833-0207	INDICATOR
4000833-0208	INDICATOR
412-040-366-105	MAIN ROTOR MAST
412-378-010	FLOAT BOTTLE - WO/ VALVE
574-074-140-003	PANEL ASSY
86000000-01	ROTOR TORQUE MONITOR
8DJ131LAV1	TRIPLE TACH
93A152-30	CVR CONTROLLER
9813-25-07	DUAL TORQUE INDICATOR
AC31C2	SWR METER
AC31D2	CONTROL
ASH584-5	INVERTER 212
AV16B1667D	VALVE
BD755-212	RADOME
BE369	SARBE BEACON
BHL212-4146-001	GAUGE
C35D10	MIXING VALVE
G4434-06	COMM CONTROL
G4434A	COMM CONTROL
G4436A	CONTROL HEAD
G4518	NAV/DME CONTROL
GEU7/A	TACHO GENERATOR

Part_No	Description
HD02-75-956-02	SEAT ASSY
HD02-75-956-03	SEAT ASSY CENTER REAR
ID48	DEVIATION INDICATOR
M1049	AUDIO AMP
M5042	AUDIO AMP
PS304-1	INVERTER 212
S152-0030-00	CONTROL
S15KILR9	AIR SPEED IND